

Блоки серии TS410, TS415

Инструкция по эксплуатации

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(727)345-47-04

Беларусь +375-257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: tni@nt-rt.ru || сайт: <https://tissin.nt-rt.ru/>

Table of contents

1	Introduction	3
1.1	General information for the user	3
1.2	Limited warranty and disclaimer	3
1.3	Requirements for safety	4
1.4	Basic safety instructions for use in Ex area	5
2	Product description	6
2.1	Function	6
2.2	Features	6
2.3	Label	6
2.4	Product code	7
2.5	Specification	8
2.6	Structure	9
2.7	Product dimension	10
2.8	Bracket dimension	11
3	Installation	12
3.1	Before installation	12
3.2	How to install	12
4	Electrical connection	13
4.1	Mechanical type (2 x SPDT)	13
4.2	Proximity type (Autonics)	13
4.3	Proximity type (P&F)	14
4.4	Mechanical type (2 x DPDT)	14
5	How to adjust cam	15
5.1	Upper switch	15
5.2	Lower switch	15

1 Introduction

1.1 General information for the user

This instruction includes installation, operation, maintenance, and parts information for TS410/TS415 series. Keep these instructions in a location which is easily accessible to every user and make these instructions available to every new owner of the device.

- Installation, commissioning and maintenance of the product can only be performed by trained specialist personnel who have been authorized by the plant operator to do so.
 - To avoid possible injury to the personnel or damage to valve parts, WARNING, CAUTION and NOTICE must be strictly followed.
 - Before installing or commissioning, be sure to read and thoroughly understand the product manual and operate the product properly.
 - Operators must strictly observe the applicable national regulations with regards to installation, function tests, repairs, and maintenance of electrical products.
 - For additional information or if specific problems occur that are not explained in these instructions, contact the manufacturer.
-

1.2 Limited warranty and disclaimer

-
- This product has been fully inspected and shipped through a thorough quality inspection procedure. The manufacturer warranty period of the product is 18 months after the product is shipped from Tissin in Korea.
 - For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
 - Using the device in a manner that does not fall within the scope of its intended use, disregarding this manual, using under unqualified personnel, or making unauthorized alterations releases the manufacturer from liability for any resulting damage. This renders the manufacturer's warranty null and void.
-

1.3 Requirements for safety

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. These safety instructions are intended to prevent hazardous situations and/or equipment damage. For the safety, it is important to follow the instructions in the manual.



WARNING

Failure to observe the warning may result in serious injuries or death.



CAUTION

Failure to observe this warning may result in damage to the device or personal injury.



NOTICE

Failure to observe the warning may result in damage to the device or may degrade performance.

Safety notes



CAUTION

- Only trained and authorized person should operate the machinery and the equipment.
 - If it is out of the specification range, it may cause a malfunction, so please use it in compliance with the product specification.
 - Never handle mechanical equipment or disassemble the device until safety is confirmed.
 - Before reaching into the device or the equipment, please switch off the power supply and secure to prevent reactivation.
 - Observe applicable accident prevention and the safety regulations for electrical equipment.
-

1.4 Basic safety instructions for use in Ex area

To prevent the risk of explosion, observe not only the basic safety instructions in the respective operating instructions for operation in the Ex area, but also the following.



WARNING

- Observe applicable safety regulations (National Safety Regulations) and general rules for construction and operating technology.
 - Check if the device is suitable for the area of use.
 - Check if the range of certified and permitted explosion-proof specifications for the product.
 - Close all unnecessary cable glands with lock screws approved for the explosions area.
 - TS410/TS415 series have the explosion proof markings for Flame proof(Ex d IIC T5/T6 Gb, Ex tb IIIC T85°C/T100°C Db). Available in Zone 1 and Zone 2.
-

2 Product Description


2.1 Function

Limit switch box is a device that notifies the open/closed state of the valve to the central control room or controller through ON/OFF electrical signals.

2.2 Features

- Flame proof type
- Compact design and External Indicator with good visibility
- Easy switch operation position setting with Spring-fixed cam
- Can select various switches
- IP67 enclosure
- NAMUR VDI/VDE 3845, ISO 5211 Bracket standards

2.3 Label

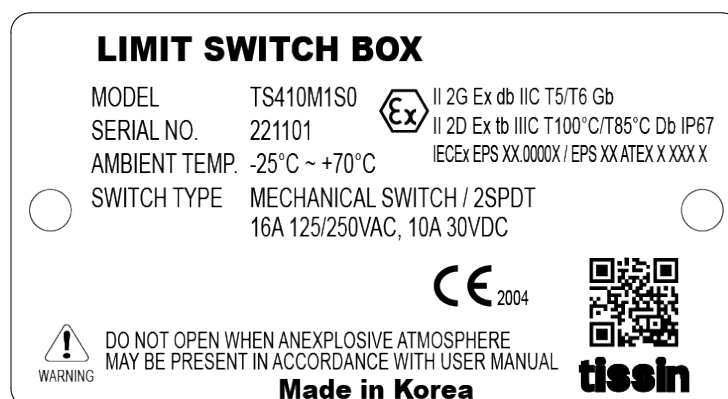

Item	Description
MODEL	Model number
SERIAL No	Serial number
AMBIENT TEMP.	Operating temperature
SWITCH TYPE	Specifications of built-in switch


2.4 Product Code

Model		TS410				
Material	Aluminum die casting	TS410				
	STS316	TS415				
Switch type	Mechanical (2xSPDT)		M			
	Proximity		P			
	Mechanical (2xDPDT)		D			
Explosion proof type	ATEX&IECEX			A		
	KCS			K		
	CCC&NEPSI			C		
	EAC(TR CU)			E		
Conduit entry	NPT1/2				1	
	M20x1.5P				2	
	NPT3/4				3	
	M25x1.5P				4	
Bracket type	None					0
	ST-1 (30x80,H20)					1
	ST-2 (30x80,H30)					2
	ST-3 (30x130,H30)					3
	ST-4 (30x130,H50)					4


2.5 Specification

Model		TS410M	TS415M	TS410P	TS415P
Switch type		Mechanical (2xSPDT)		Proximity	
		KW3A-16Z3B-A200 (Dongnan)		PSN17-5DNU (Autonics)	
Switch specification	AC	16A,125/250v		-	
	DC	30V,10A		10~30V	
Explosion proof		Ex db IIC T5/T6 Gb Ex tb IIIC 85°C/T100°C Db			
Enclosure		IP67			
Conduit entry		2xNPT1/2, NPT3/4, M20, M25			
Ambient temp.		-20°C~70°C (Standard)			
Terminals		8 Points			
Painting		Polyester powder coating	-	Polyester powder coating	
Material		Aluminum die casting	STS316	Aluminum die casting	STS316
Weight		1.3kg	3.2kg	1.3kg	3.2kg


2.6 Structure

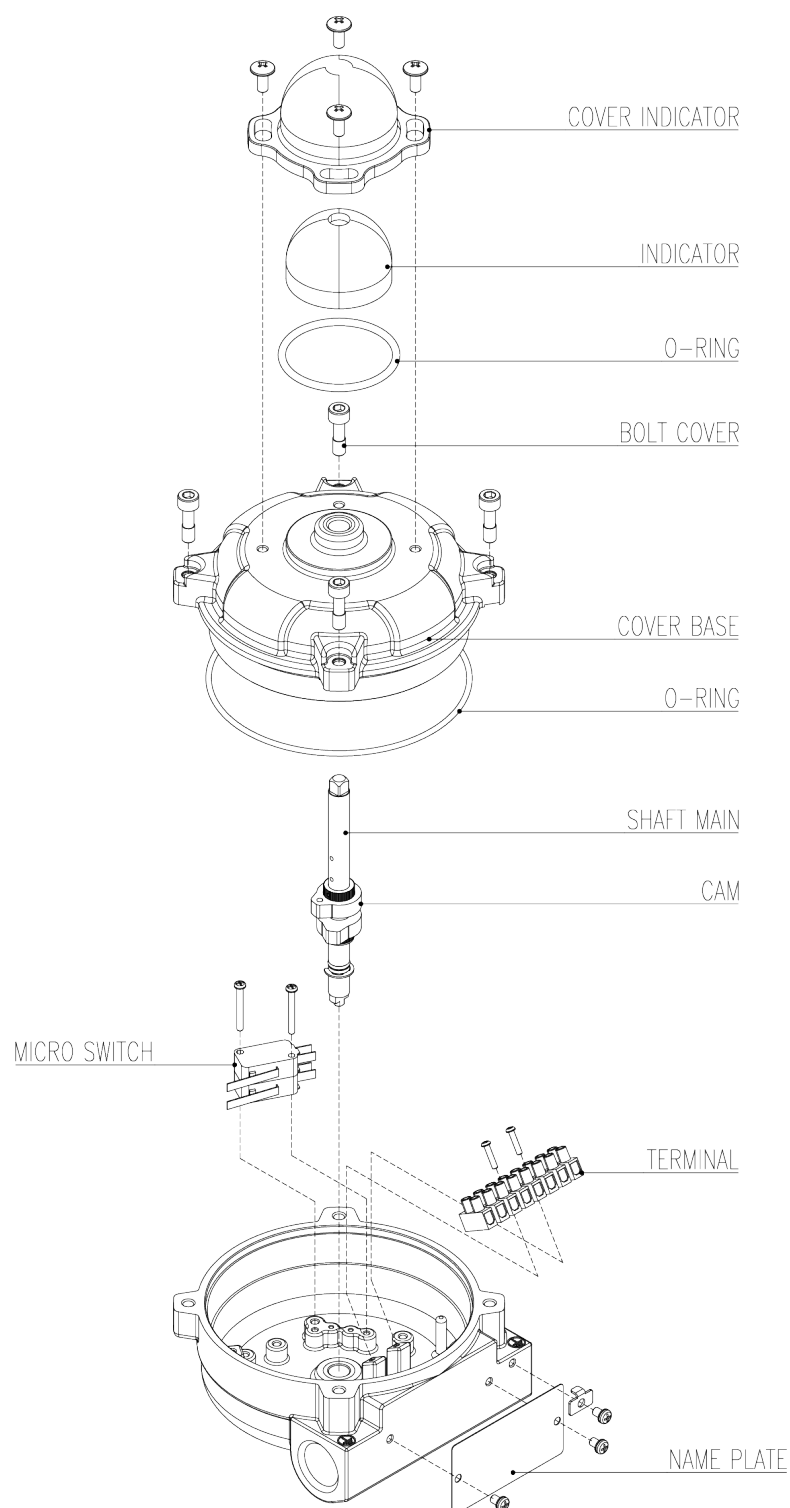

2.7 Product Dimension

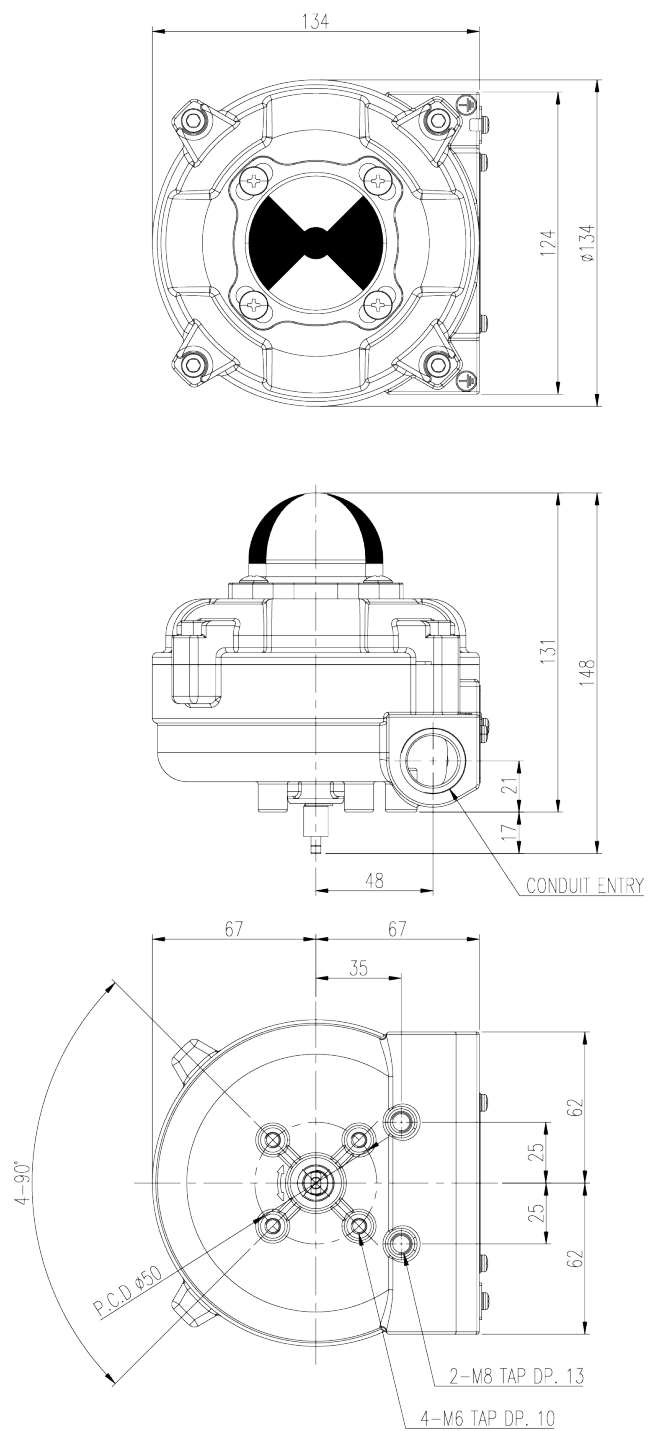

2.8 Bracket Dimension

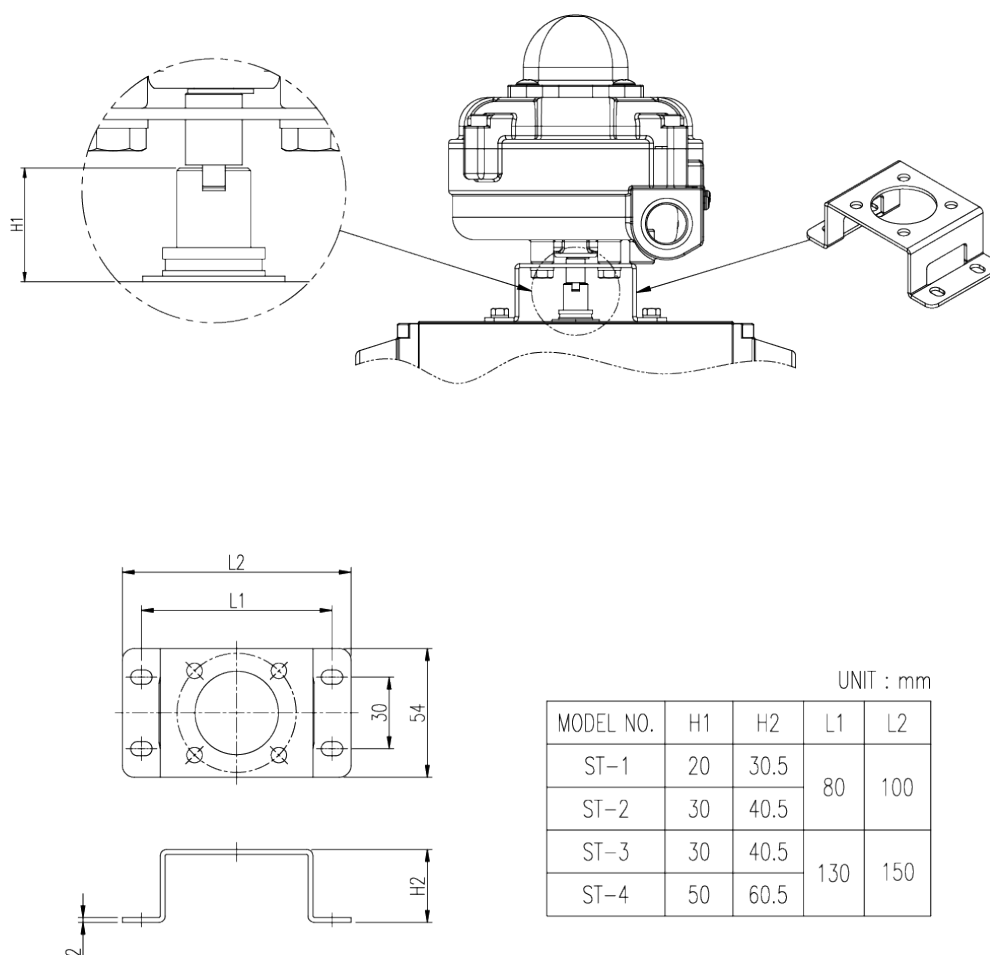

3 Installation


3.1 Before installation

 WARNING


- Before installation, shut off the air pressure and make sure that no air pressure remains inside the actuator.
 - When using in explosion-proof area, observe the explosion-proof regulations.
-

3.2 How to install

- ① As shown in Figure 01, fasten Bracket to the product with 4pcs-bolts included in the box.
- ② As shown in Figure 02, mount Limit switch box's shaft on actuator stem and fasten Bracket to actuator with bolts.

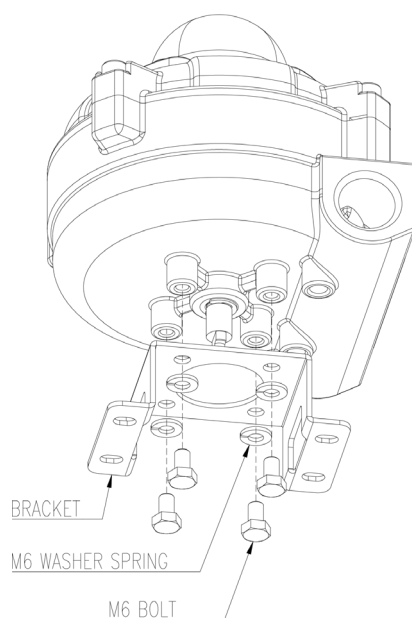

<Figure 01>

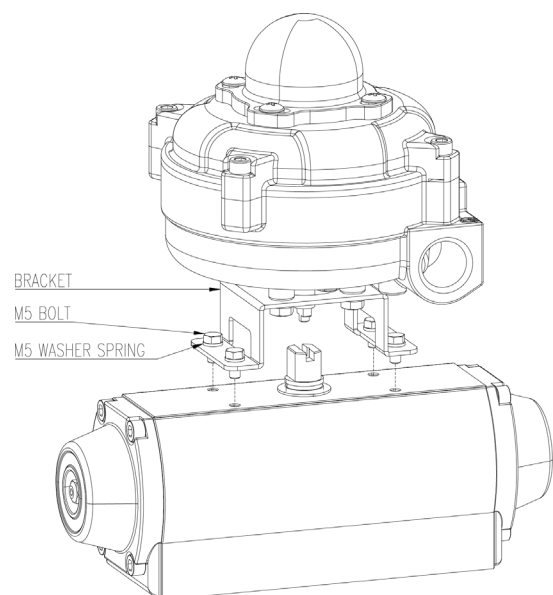


<Figure 02>

4 Electrical connection


WARNING

- When connect the power using a Flame proof type packing cable connector, use an Flame proof approved product that is suitable for use at the site.
- When open the terminal cover, be sure to turn off the power first.
- To protect the product, ground it to the ground terminal inside and outside the product.
- There are two conduit entry in the product, and be sure to block the unused conduit entry with an explosion proof blind plug.


4.1 Mechanical type (2 x SPDT)

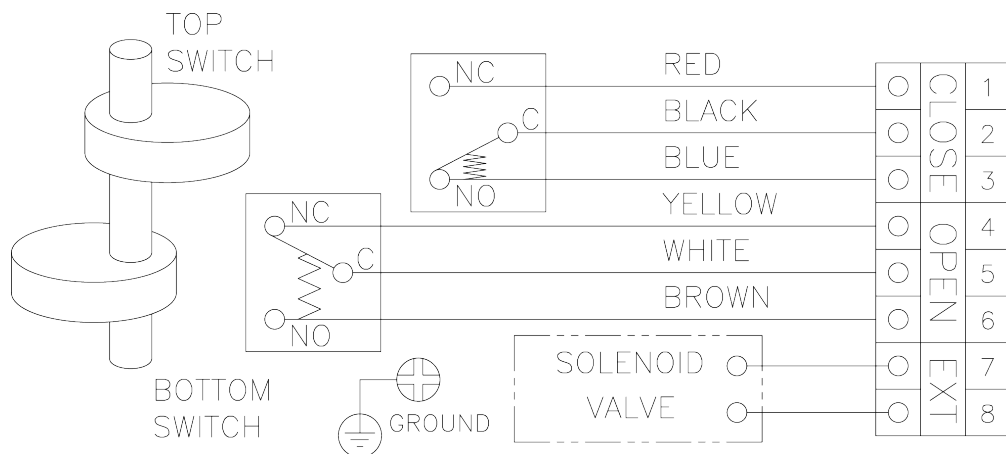


4.2 Inductive proximity type (Autonics PSN17-DNU, NPN Type)

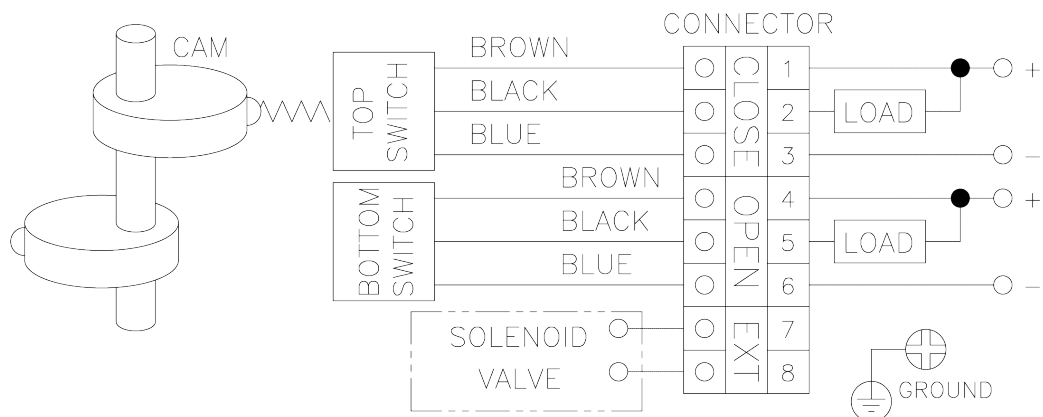

4.3 Inductive proximity type (P&F NJ2-V3-N, NC Type)

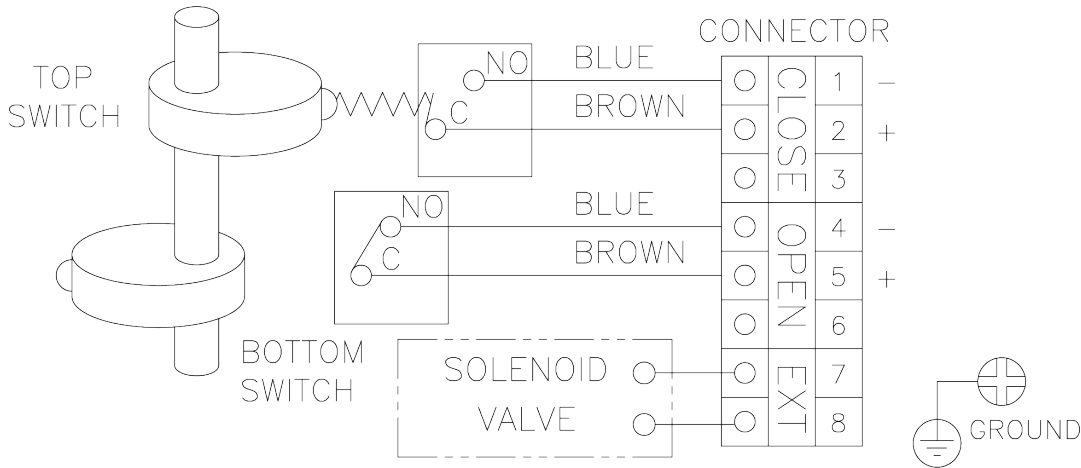


4.4 Mechanical type (2 x DPDT)

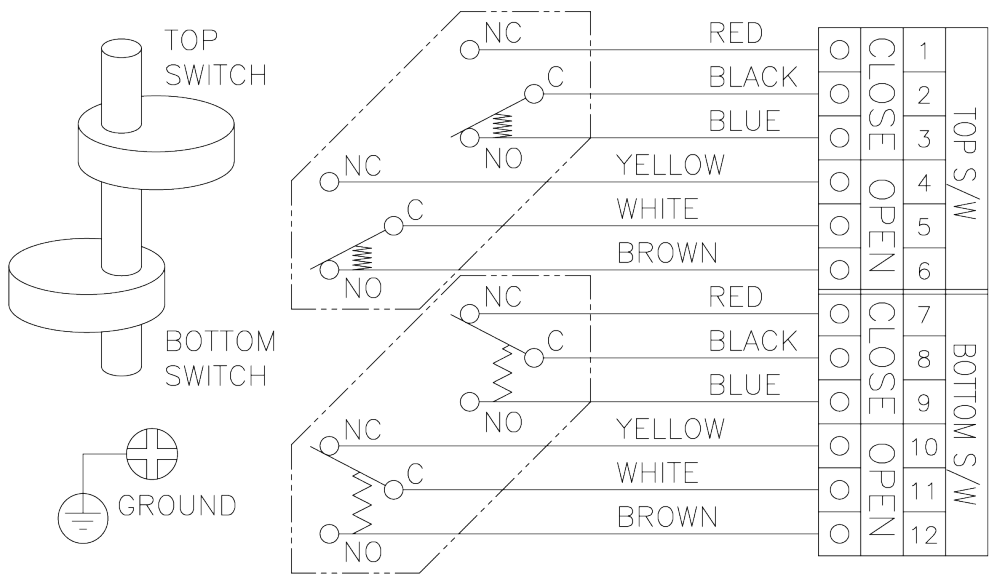

5 How to adjust cam


5.1 Upper switch

Push the upper cam down, turn left/right to adjust the cam to operate the upper switch in the desired position, release the cam, and It will return to a stable position by itself.

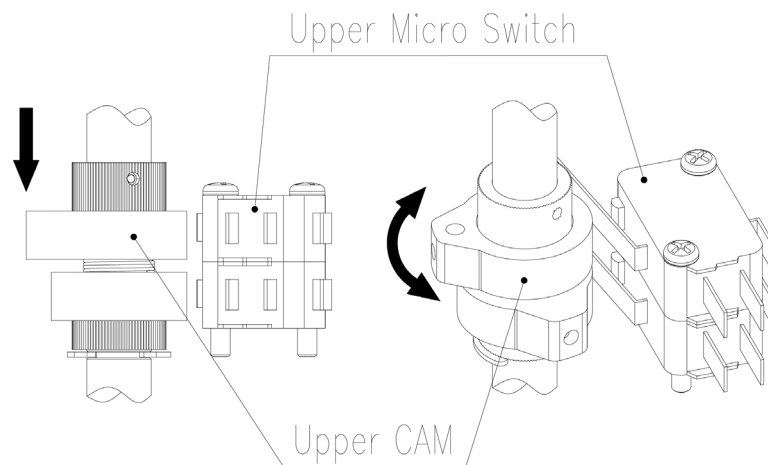

5.2 Lower switch

Pull the lower cam up, turn left/right to adjust the cam to operate the lower switch in the desired position, release the cam, and It will return to a stable position by itself.

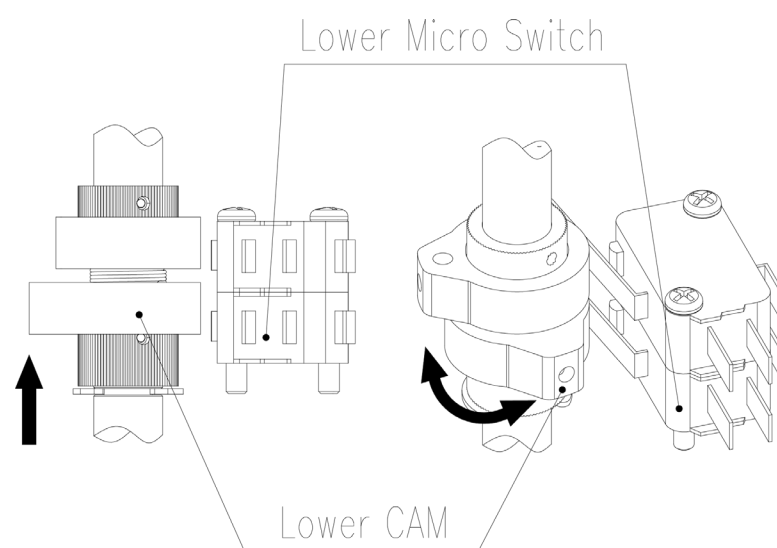



По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(727)345-47-04

Беларусь +375-257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: tni@nt-rt.ru || сайт: <https://tissin.nt-rt.ru/>